

# Cool Tube

## Assembly Instructions

### PARTS INCLUDED:

#### For hanging the Cool Tube:

- 1 Cool Tube w/cord attached
- 1 zip tie
- 1 ground terminal
- 2 eye bolts
- 2 large nuts
- 2 large star washers
- 2 large washers

#### For adding on the Reflector:


- 2 metal straps
- 2 reflector strips
- 4 screws
- 4 small star washers
- 4 small washers
- 4 small nuts

#### To hang the Cool Tube:


- 1- Clean the tube with window cleaner — or a similar product.
- 2- Take one of the eye bolts and screw a large nut half-way up the length of the bolt, then add a large star washer, followed by a large flat washer onto the bolt. (See Fig.A.) Now screw the bolt with the nut and the washers on it into the top holes of the Cool Tube until you have a snug fit. (See Fig.B.) This ensures a strong hanging point. Repeat for the other side.
- 3- Now insert HID bulb. It is important to keep the bulb clear of fingerprints.
- 4- Hang the Cool Tube.
- 5- Add the ducting to your unit. We suggest using a clamp (not included).
- 6- Plug the cord provided into your Hydrofarm ballast (with or without the optional extension cord).

#### Assembly of add-on reflector:

- 1- The reflector strips can be attached in 2 different ways. Decide which angle best meets your needs. Figure C shows the strips attached for a wider distribution of light compared to Figure D, which concentrates the light down to a smaller space.
- 2- Take the metal strap with the open end facing down and insert one screw provided through the inside of the strap. Make sure the screw is pointing outward. Then take one of the reflector strips and insert the screw through the hole. Next, add one small star washer, one flat washer, and one small nut to the outside of the reflector and secure tightly. (See Fig.E.)
- 4- Repeat the previous steps for the other three holes.
- 5- Clip the reflector to the top of the Cool Tube so that the reflector is extended downward, concentrating the light to a single area.

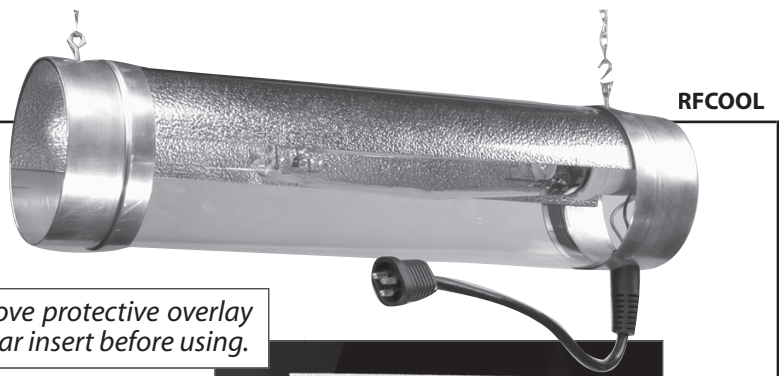

**NOTE:** Remove protective overlay from specular insert before using.

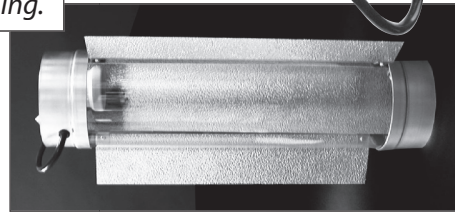

**The Cool Tube comes pre-wired, ready for use. The reflector shown here is an optional add-on. Reflector parts come with the Cool Tube.**



With the Cool Tube we recommend using a Hydrofarm 15' Lock & Seal Lamp Cord Extension (CSXCOR) — not included.

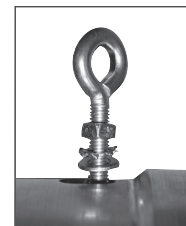


FIG. A



FIG. B

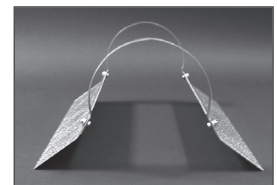


FIG. C

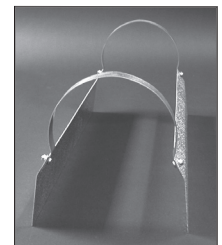


FIG. D

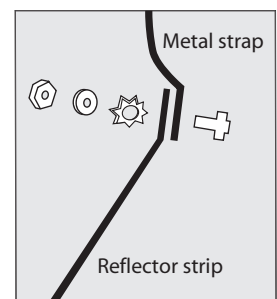


FIG. E